

OPERATING INSTRUCTIONS W1550



ZERO CALIBRATION

- 1.0 Weigh the Vehicle empty.
- 1.1 Lift the body into the weighing position.
(This is when the body is clear of the chassis)
- 1.2 Press and Hold **CH1** button on the front of the indicator.
Adjust **Zero (CH1)** on the back of the display until display shows 00.0
- 1.3 Press and Hold **CH2** button on the front of the indicator.
Adjust **Zero (CH2)** on the back of the display until display shows 00.0
- 1.4 Release both buttons and the display will show the total weight 00.0

SPAN CALIBRATION

- 2.0 Apply the load.
- 2.1 Calculate the payload from the weight on the weighbridge.
- 2.2 Lift the body to the weighing position.
- 2.3 Adjust the **Span** on the back of the indicator until the display shows the payload.

GENERAL

To look at each channel individually lift the body to the weighing position, Press and hold the **CH1** button to display the load at the front of the body, Press and hold the **CH2** button to display the load at the back of the body. If no buttons are pressed the display will show the total weight.